

HITACHI

HITACHI SPLIT UNIT AIR CONDITIONER

INSTALLATION MANUAL

INDOOR UNIT / OUTDOOR UNIT

RAK-25PSEW/RAC-25SWE RAK-35PSEW/RAC-35SWE
RAK-35PSEW/RAC-35SWE RAK-35PSEW/RAC-35SWE
RAK-50PSEW/RAC-50SWE RAK-50PSEW/RAC-50SWE

- Carefully read through the procedures of proper installation before starting installation work.
- The sales agent should inform customers regarding the correct operation of installation.

Tools Needed For Installation Work
 (⊗ mark is tool exclusive use for R410A, R32) ⊗ ⊗ ⊗ ⊗ ⊗
 • Measuring Tape • Knife • Saw • Pipe Cutter • Hexagonal Wrench Key (3.2 4mm) • Power Drill (φ6.5~φ8.0mm)
 • Vacuum Pump • Pliers or Wrench • Torque Wrench
 • Vacuum Pump Adaptor • Flare Tool • Gas Leakage Detector • Manifold Valve • Charge Hose

SAFETY PRECAUTION

- Read the safety precautions carefully before operating the unit.
- This appliance is filled with R32.

- The contents of this section are vital to ensure safety. Please pay special attention to the following sign.
- WARNING.....Incorrect methods of installation may cause death or serious injury.**
- CAUTION.....Improper installation may result in serious consequence.**
- Make sure to connect earth line.**
- This sign in the figures indicates prohibition.**

Be sure that the unit operates in proper condition after installation. Explain to customer the proper operation and maintenance of the unit as described in the user's guide. Ask a customer to keep this installation manual together with the instruction manual.

WARNING


- Please request your sales agent or qualified technician to install your unit. Water leakage, short circuit or fire may occur if you do the installation work yourself.
- Please observe the installation stated in the installation manual during the process of installation. Improper installation may cause water leakage, electric shock and fire.
- Make sure that the units are mounted at locations which are able to provide full support to the weight of the units. If not, the units may collapse and impose danger.
- Observe the rules and regulations of the electrical installation and the methods described in the installation manual when dealing with the electrical work. Use cables which are approved official in your country. Be sure to use the specified circuit. A short circuit and fire may occur due to the use of low quality wire or improper work.
- Be sure to use the specified cables for connecting the indoor and outdoor units. Please ensure that the connections are tight after the conductors of the wire are inserted into the terminals to prevent the external force is being applied to the connection section of the terminal base. Improper insertion and loose contact may cause over-heating and fire.
- Please use the specified components for installation work. Otherwise, the unit may collapse or water leakage, electric shock, fire or stronger vibration may occur.
- Be sure to use the specified piping set for R410A, R32. Otherwise, this may result in broken copper pipes or faults.
- When installing or transferring an air conditioner to another location, make sure that air other than the specified refrigerant (R32) does not enter the refrigeration cycle. If other air should enter, the pressure level of the refrigeration cycle may increase abnormally which could result in a rupture and injury.
- Never install a drier to this R32 unit in order to guarantee its lifetime.
- Be sure to ventilate fully if a refrigerant gas leak while at work. If the refrigerant gas comes into contact with fire, a poisonous gas may occur.
- After completion of installation work, check to make sure there is no refrigeration gas leakage. If the refrigerant gas leaks into the room, coming into contact with fire in the fan-driven heater, space heater, etc., a poisonous gas may occur.
- Unauthorized modifications to the air conditioner may be dangerous. If a breakdown occurs please call a qualified air conditioner technician or electrician. Improper repairs may result in water leakage, electric shock and fire, etc.
- Be sure to connect the earth line from the power supply wire to the outdoor unit and between the outdoor and indoor unit. Do not connect the earth line to the gas tube, water pipe, lighting rod or the earth line of the telephone unit. Improper earthing may cause electric shocks.
- When finishing the refrigerant collection (pumping down), stop the compressor and then remove the coolant pipe. If you remove the refrigerant pipe while the compressor is operating and the service valve is released, air is sucked and a pressure in the freezing cycle system will build up steeply, causing an explosion or injury.
- When installing the unit, be sure to install the refrigerant pipe before starting the compressor.
- If the refrigerant pipe is not installed and the compressor is operated with the service valve released, air is sucked and the pressure level of the refrigeration cycle may increase abnormally which could result in a rupture and injury.
- The electric cables should neither be reworked nor added.
- Make sure to use an exclusive circuit breaker.
- Otherwise fire or electric shock might occur by connection failure, isolation failure or over current.
- Make sure to connect cables to terminal properly and terminal cover should close firmly.
- Otherwise, over heating at terminal contact, fire or electric shock might occur.
- Make sure that there is no dust on any connected points of electric cables and fix firmly.
- Otherwise, fire or electric shock might occur.

CAUTION

- A circuit breaker must be installed in the house distribution box for the direct connected power supply cables to the outdoor unit. In case of other installations a main switch with a contact gap or more than 3mm has to be installed. Without a circuit breaker, the danger of electric shock exists.
- Do not install the unit near a location where there is flammable gas. The outdoor unit may catch fire if flammable gas leaks around it.
- Please ensure smooth flow of water when installing the drain hose. Improper installing may wet your furniture.
- An IEC approved power cord should be used. Power cord type: NYM.

CONDENSED WATER DISPOSAL OF OUTDOOR UNIT

- There is holes on the base of Outdoor unit for condensed water to exhaust.
- In order to flow condensed water to the drain, the unit is installed on a stand or a block so that the unit is 100mm above the ground as shown figure. Join the drainpipe to one hole.
- After installation, check whether the drain pipe clings to the base firmly.

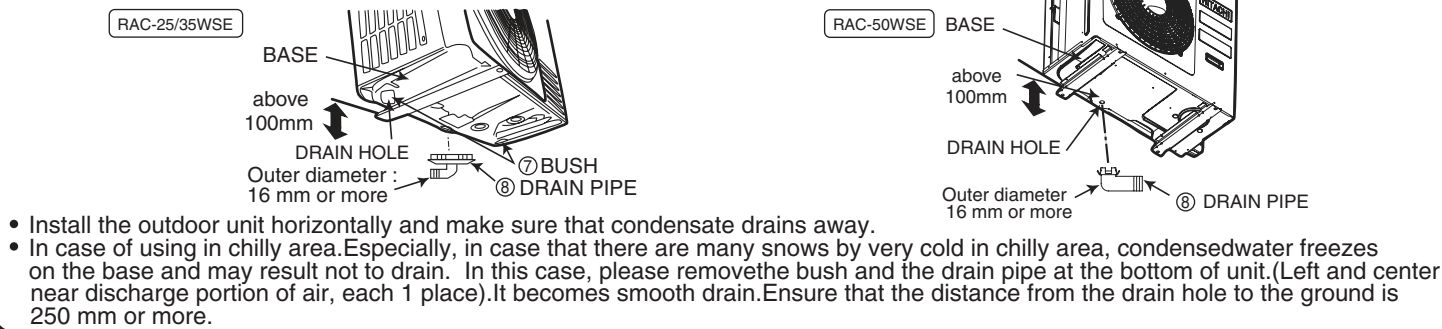



1. Installation of Mounting Board, Wall Penetration and Installation of Protection Pipe

CAUTION

- The drain hose can be installed from the left or right of the Indoor unit. When installing the indoor unit, the mounting board must be fixed horizontally or slightly tilted down towards the side of drain hose. If it is tilted above the side of the drain hose, condensed water may overflow.

1.1 Direct Mounting On The Wall

- Please use hidden beams in the wall to hold the hanger.

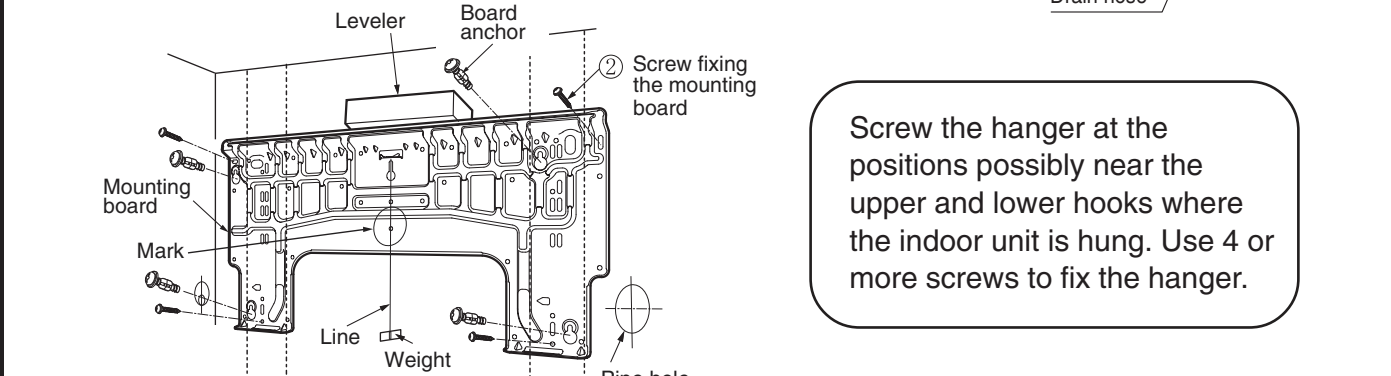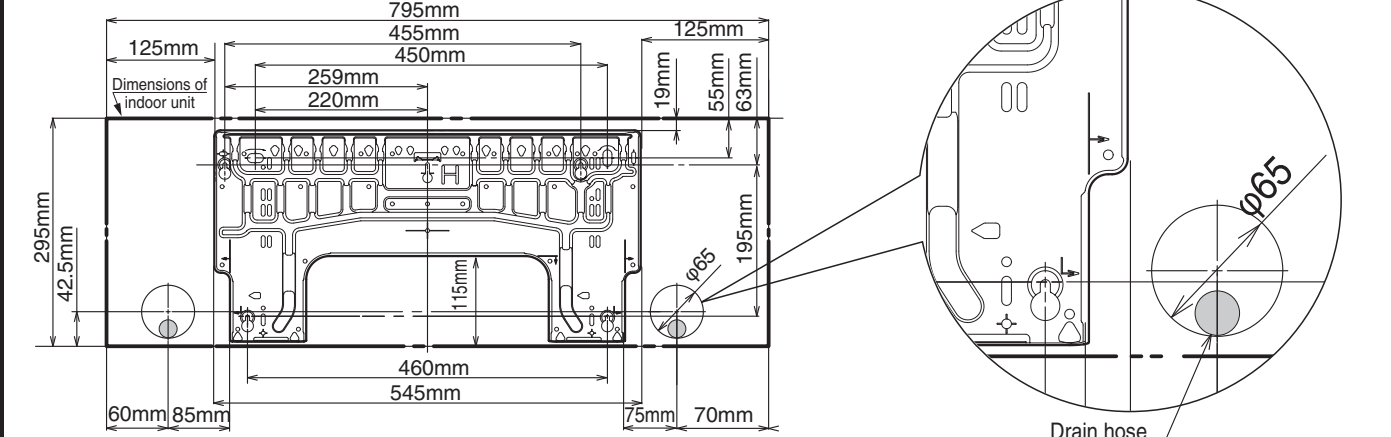

1.2 Procedures of Installation and Precautions

- Procedures to fix the hanger.
- 1. Drill holes on wall. (As shown below)
- 2. Push plug into the holes. (As shown below)
- 3. Fix the hanger on wall with 4.1 x 32 screw. (As shown in figure below)

THE CHOICE OF MOUNTING SITE (Please note the following matters and obtain permission from customer before installation.)

WARNING

- The unit should be mounted at stable, non-vibratory location which can provide full support to the unit.

CAUTION

- No nearby heat source and no obstruction near the air outlet is allowed.
- The clearance distances from top, right and left are specified as follows in figure below.
- The location must be convenient for water drainage and pipe connection with the outdoor unit.
- Do not install at a location where there is flammable gas, steam, oil and smoke. There is a risk of fire, explosion, deterioration of resin and/or damage.
- To avoid interference from noise, please place the unit and its remote controller at least 1m from the radio and television.
- To avoid any error in signal transmission from the remote controller, please put the controller far away from high-frequency machines and high-power wireless systems.
- Lighting fixtures with electronic starters may shorten the reception distance and may even interfere with the signal being received.
- The installation height should be at least 2.3m or more from the floor.


The indoor unit (air outlet) should be installed at least 1.5m away from fire alarm.

WARNING

- The outdoor unit must be mounted at a location which can support heavy weight. Otherwise, noise and vibration will increase.

CAUTION

- Do not expose the unit under direct sunshine or rain. Besides, ventilation must be good and clear of obstruction.
- The air blown out of the unit should not point directly to animals or plants.
- The clearances of the unit from top, left, right and front are specified as follows in figure below. At least two sides must be clear for ventilation.
- Be sure that the hot air blown out of the unit and noise do not disturb the neighborhood.
- Place not exposed to strong wind.
- Particularly on the rooftop of a building, strong wind blows and the outdoor unit may be damaged.
- Do not install at a location where there is flammable gas, steam, oil and smoke.
- The location must be convenient for water drainage.
- Place the outdoor unit and its connecting cord at least 1m away from the antenna or signal line of television, radio or telephone. This is to avoid noise interference.
- Do not install the indoor unit in a place where small animals may build their nests. If small animal goes inside the unit and touches the electrical parts, failure of the unit, smoke or fire may be caused. Request your customer to keep the surrounding of the unit clean.

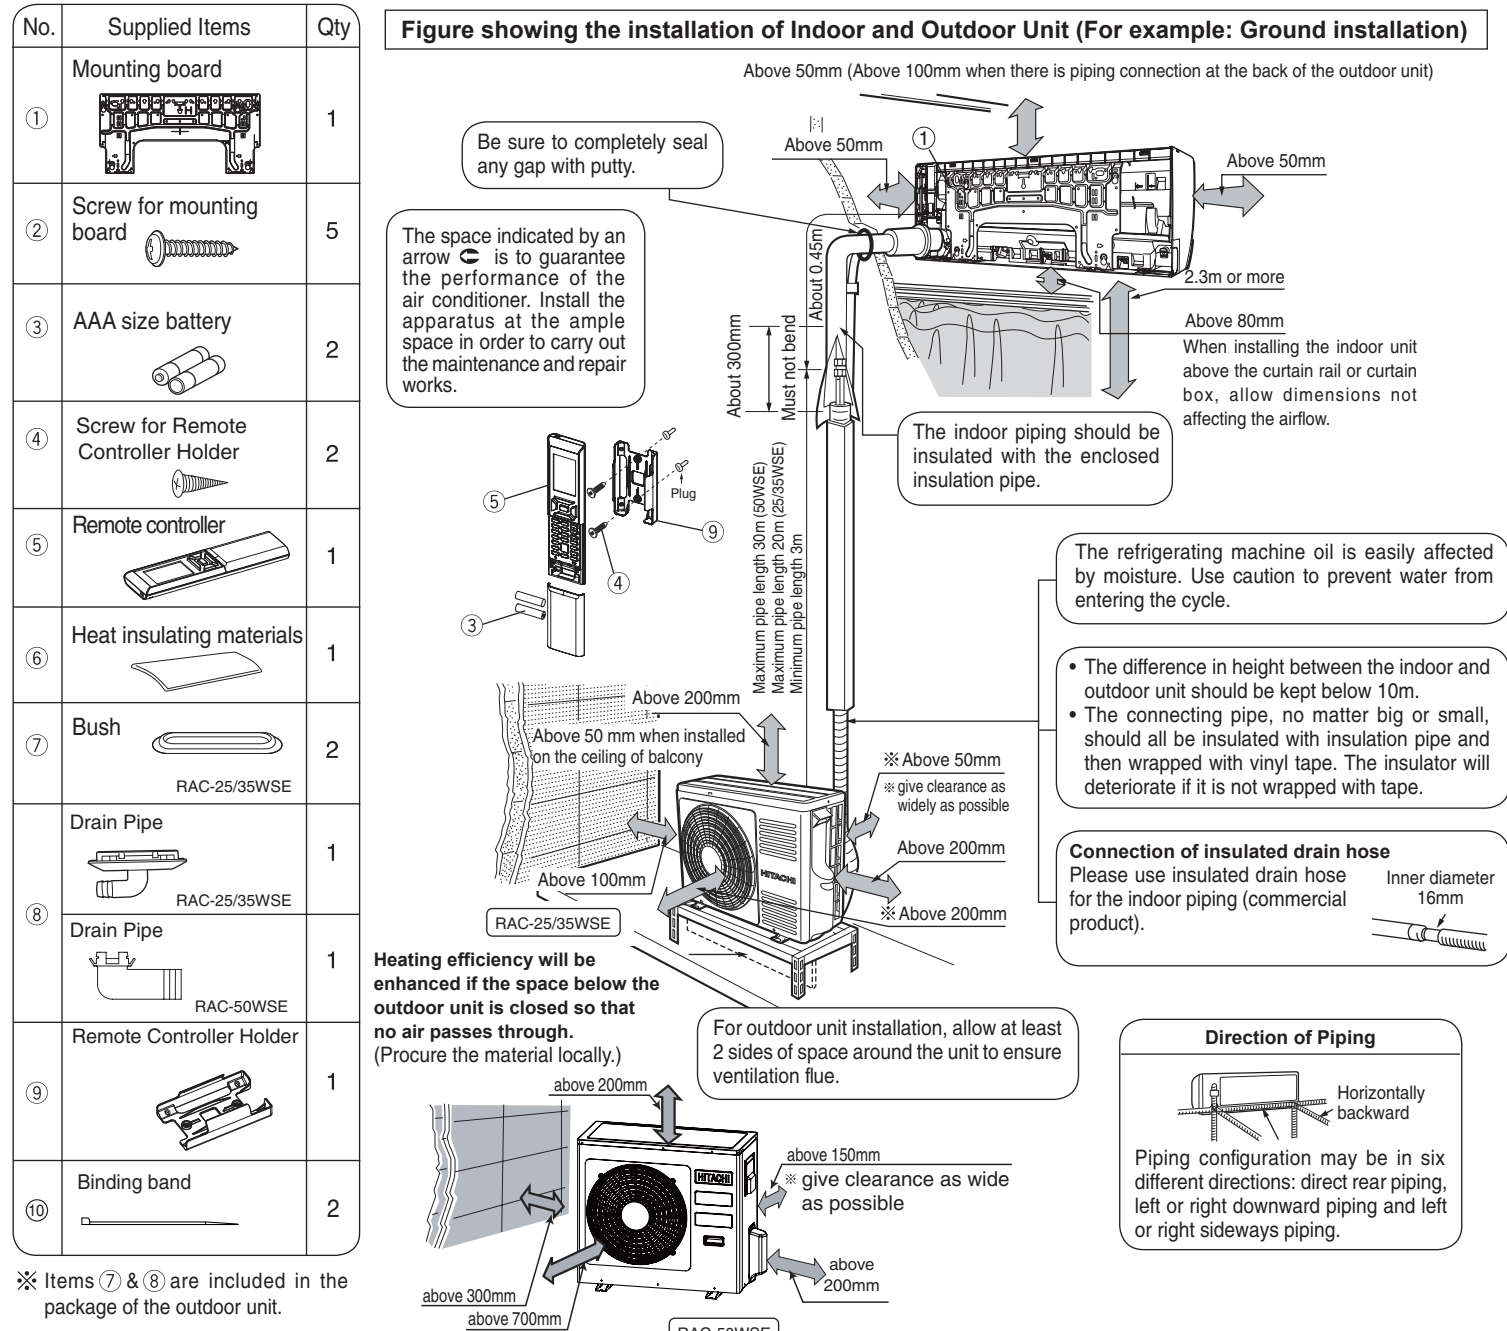

*Items ⑦ & ⑧ are included in the package of the outdoor unit.

1.3 Wall Penetration and Installation of Protection Pipe

- Drill a φ65mm hole on wall which is slightly tilted towards the outdoor side.
- Cut the protection pipe according to the wall thickness and pass through the wall hole.
- Empty gap in the sleeve of Protection protection pipe should be pipe completely sealed with putty to avoid dripping of rain water into the room.

2. Installation of the Indoor Unit


2.1 Preparation of Installation

Remove the front panel

- To remove front panel, please refer to "Removing and Attaching the Front Panel" on page 13.
- Make sure to use both hands to attach and remove the front panel.

Remove the lower cover

- Push the bottom inner part (1) of the lower cover to remove the lower cover.

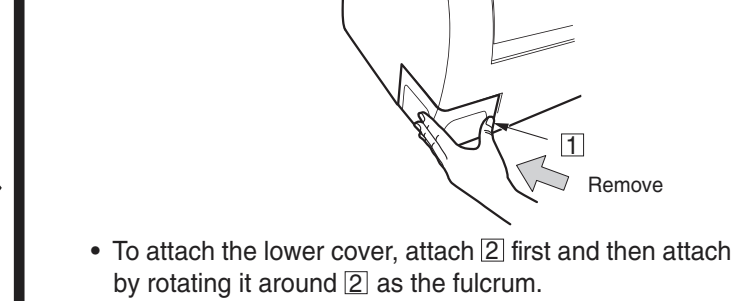

- To attach the lower cover, attach (2) first and then attach (1) by rotating it around (2) as the fulcrum.




Wiring connection

- Please refer to "Connection of Power Cord" on page 10.

Cutting lower cover bush (Horizontal and downward piping)

- While installing the pipe from the right, left or bottom side, use a knife to cut lower cover bush accordingly.
- Use the groove on the outer side if the pipe which is to be installed from the left side, etc. is big.







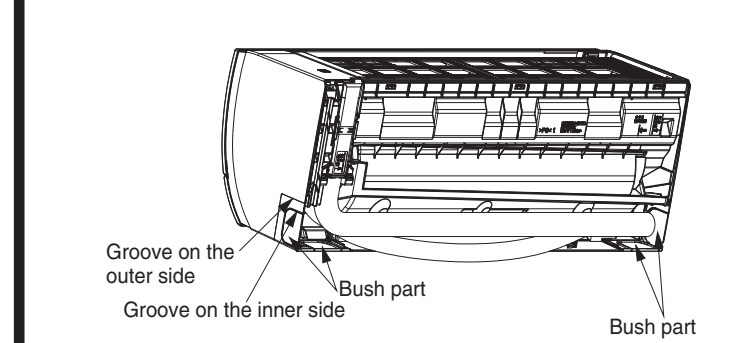


WARNING

- Protection pipe (commercial product) must be used** Be sure that the wire is not in contact with any metal in the wall. Please use the protection pipe as wire passing through the hollow part of the wall to prevent damage by mouse, possibility of short circuit or fire.
- Completely seal with putty** High humidity air inside the wall or the outdoor may go in to the room and could result in dripping of dew. It could also cause smell or odor present outdoor and inside the wall spreading into the room.

Changing of drain hose (Horizontally piping)

- Install and change the drain hose and drain cap when installing the pipe horizontally as shown below.
- Remove the lower cover when installing and changing.
- Do not carry out horizontal piping for drain hose.

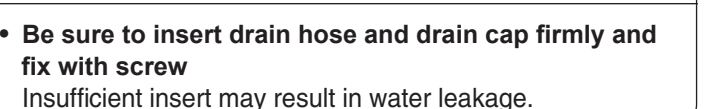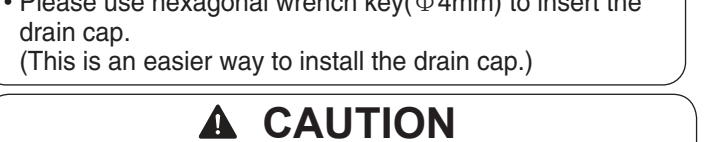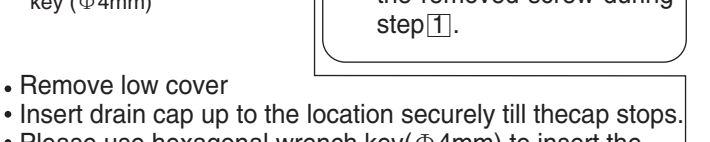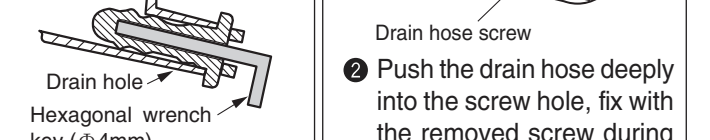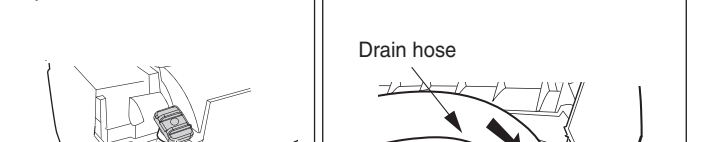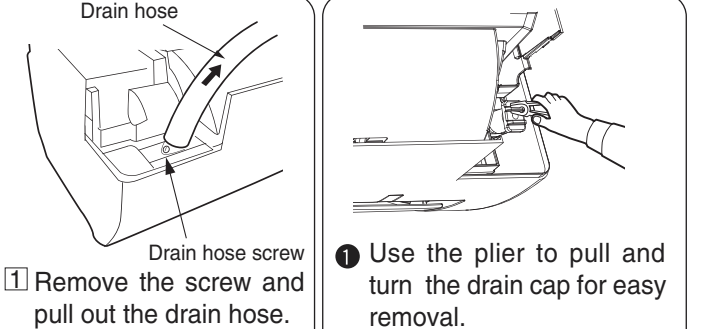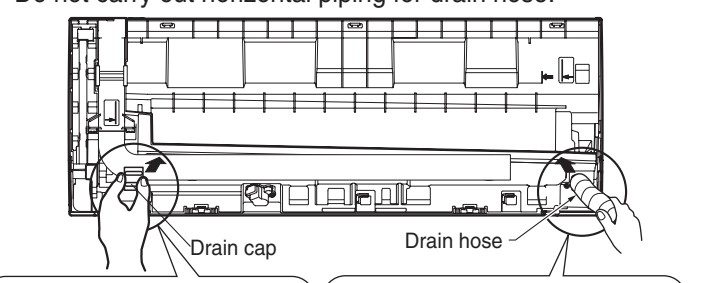

CAUTION


- Be sure to insert drain hose and drain cap firmly and fix with screw

Insufficient insert may result in water leakage.


Preparation of Pipe

Backward piping

- Remove the auxiliary insulation material sheet which is attached to the pipe insulation.
- Referring to the mark on the rear side, form the pipe within the wall hole range.

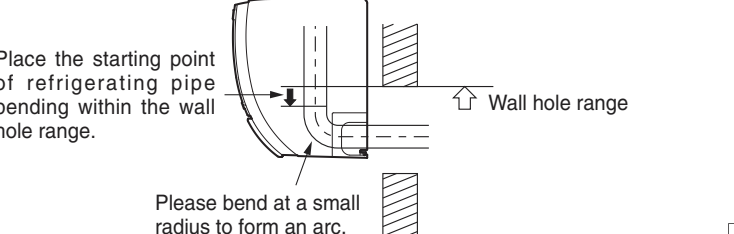


If the starting point of refrigerating pipe bending is projected from the wall hole range or if the bending radius is too large, the indoor unit may be lifted from wall and this may cause poor finishing.

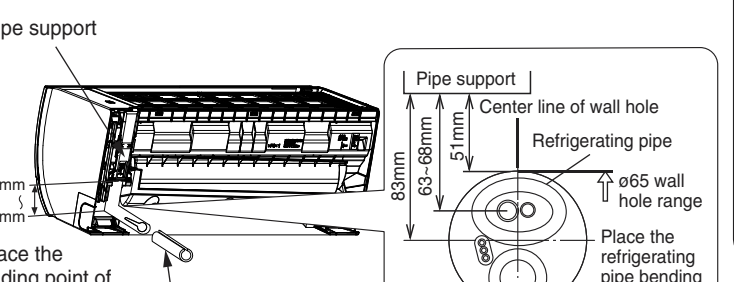


Installation after connection of refrigerating pipes (Horizontal piping)

- Remove the auxiliary insulation material sheet which is attached to the pipe insulation. Connect the refrigerating pipe. (Refer to "Pipe Connection" on page 9)
- Cut the heat insulation sheet refrigerating pipe aligning to the insulation sheet of the pipe and fix them temporarily with tape.
- Cover the pipe connection with the auxiliary insulation sheet which was removed earlier, with its split line on the top. Wrap the tape without any gap. Tape must not be over tightened. (Refer to "Heat insulation and Finishing of Piping" on page 11) If there is gap or over-tightened, it may cause condensation.

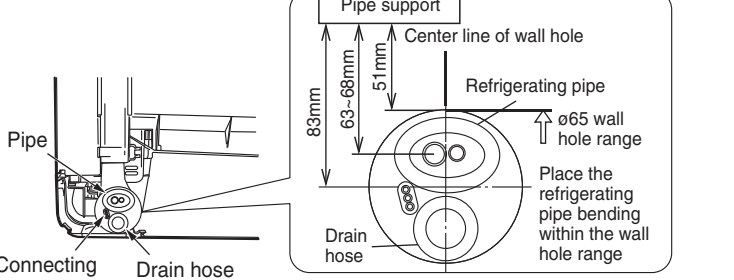


Wrap the wall hole portion with tape.

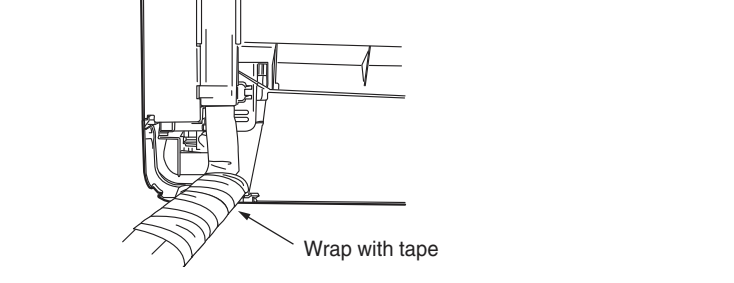


Horizontally and downward piping from the right

- Remove the auxiliary insulation material sheet which is attached to the pipe insulation. (Keep the removed auxiliary insulation material sheet because it will be reused after pipe connection.)
- Carry out refrigerating pipe forming.
- Temporarily join the refrigerating pipe, drain hose and connecting cord with tape.

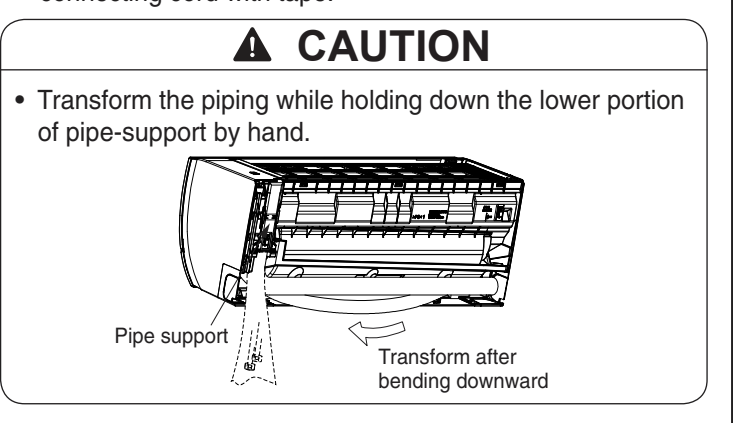


Installation after connection of refrigerating pipes (Horizontal piping)

- Remove the auxiliary insulation material sheet which is attached to the pipe insulation. Connect the refrigerating pipe. (Refer to "Pipe Connection" on page 9)
- Cut the heat insulation sheet refrigerating pipe aligning to the insulation sheet of the pipe and fix them temporarily with tape.
- Cover the pipe connection with the auxiliary insulation sheet which was removed earlier, with its split line on the top. Wrap the tape without any gap. Tape must not be over tightened. (Refer to "Heat insulation and Finishing of Piping" on page 11) If there is gap or over-tightened, it may cause condensation.

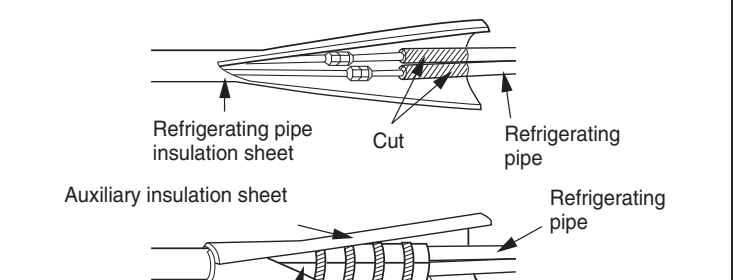

Wrap the wall hole portion with tape.

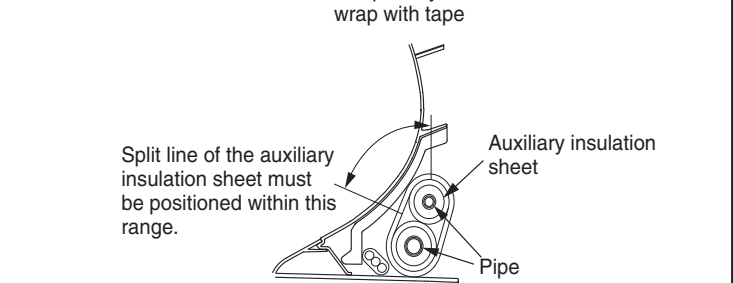


Form the refrigerating pipe according to the wall hole position.

Especially in the case of horizontally backward piping, follow the instruction below to carry out accurate forming.


Forming of refrigerating pipe for horizontally backward piping

- Refer to the mark at the back, start bending the refrigerating pipe within wall hole range.

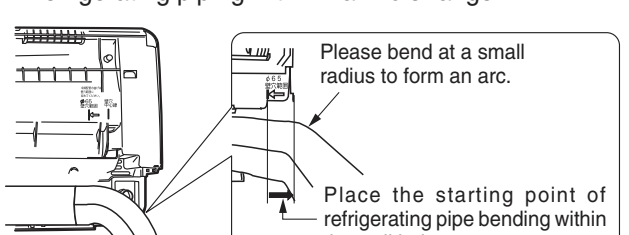


If the starting point of refrigerating pipe bending is projected from the wall hole range or if the bending radius is too large, the indoor unit may be lifted from wall and this may cause poor finishing.

- When forming, bend the refrigerating pipe with the smallest radius.

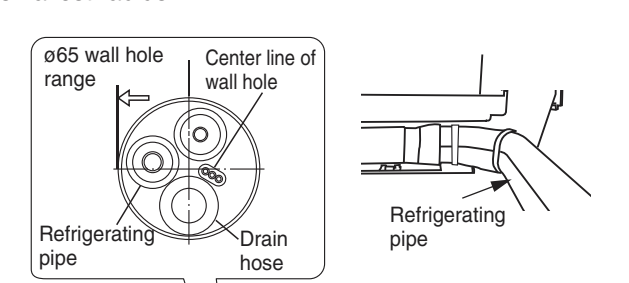

When using a plastic hose, make sure to insert it only after pipe expanding is carried out to avoid cutting dust from getting inside.

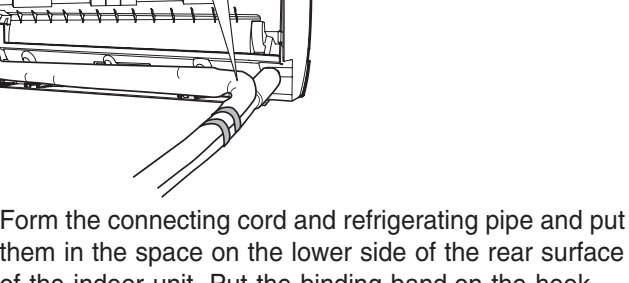

2.2 Installation


Connecting the refrigerating pipe other than at the back of the indoor unit

- Insert the pipes through the wall hole.
- Hang the upper part of the indoor unit on the mounting board.
- Push the lower part of the indoor unit to the wall, hook the projection on the lower part of the indoor unit onto the mounting board.
- Cover the pipe connection with the auxiliary insulation sheet which was removed earlier, with its split line on the top. Wrap the tape without any gap. (Refer to "Heat insulation and Finishing of Piping" on page 11) If there is gap or over-tightened, it may cause condensation.

Be sure to cut the extra binding band. (Otherwise, it may result in abnormal noise or dewfall.)

CAUTION

- Be sure that the drain hose is loosely connected bend or proper condition like left figure.

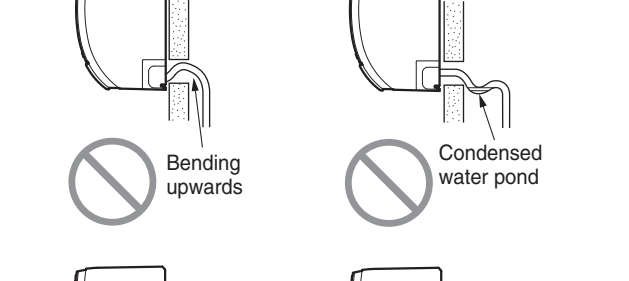


CAUTION

- You are free to choose the side (left or right) for the installation of drain hose. Please ensure the smooth flow of condensed water of the indoor unit during installation. (Careless may result in water leakage.)


CAUTION

- Be sure that the drain hose is loosely connected bend or proper condition like left figure.

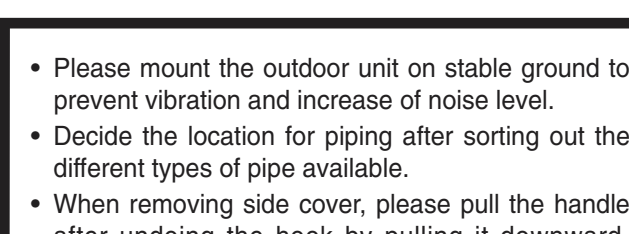


CAUTION

- Be sure that the drain hose is loosely connected bend or proper condition like left figure.

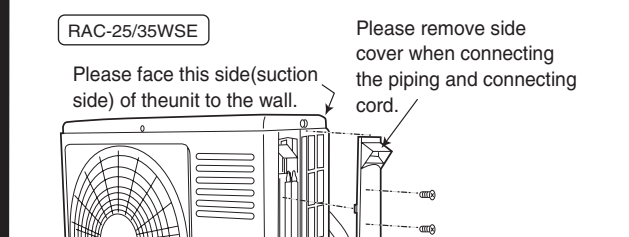


CAUTION

- Be sure that the drain hose is loosely connected bend or proper condition like left figure.

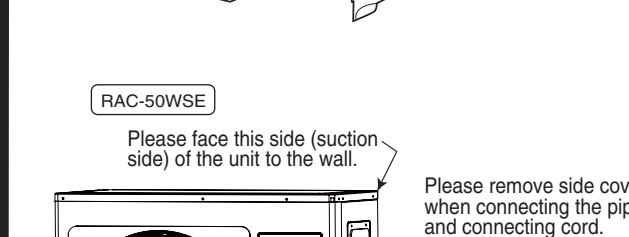

CAUTION

- Be sure that the drain hose is loosely connected bend or proper condition like left figure.

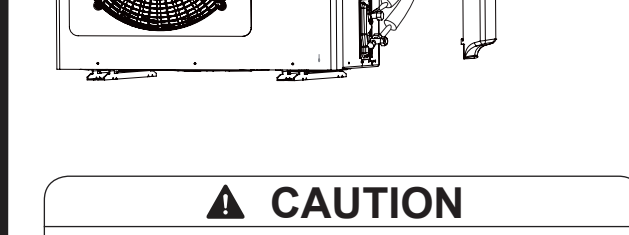


CAUTION

- Be sure that the drain hose is loosely connected bend or proper condition like left figure.

Failure to do so may cause an injury.


Connecting the refrigerating pipe at the back of the indoor unit

- Form and set the refrigerating pipe and connecting cord.

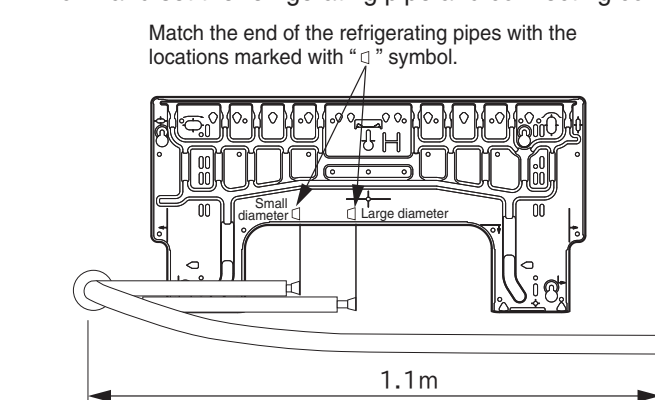


CAUTION

- Be sure that the drain hose is loosely connected bend or proper condition like left figure.

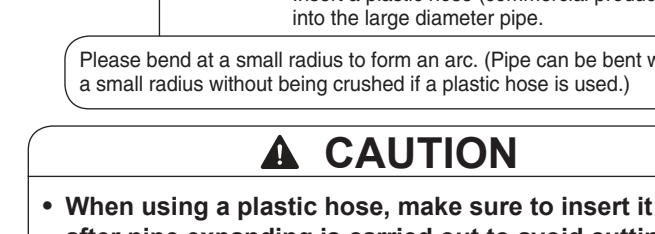


CAUTION

- Be sure that the drain hose is loosely connected bend or proper condition like left figure.

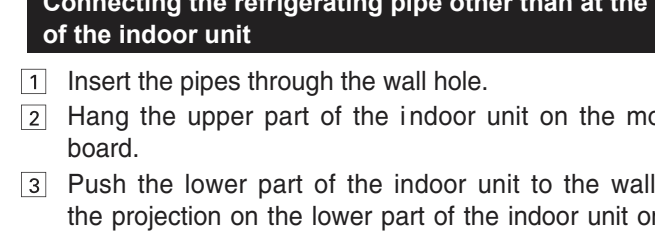


CAUTION

- Be sure that the drain hose is loosely connected bend or proper condition like left figure.

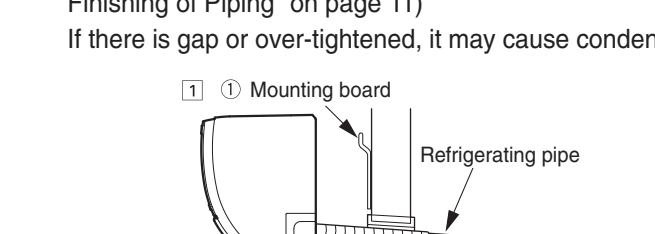


CAUTION

- Be sure that the drain hose is loosely connected bend or proper condition like left figure.

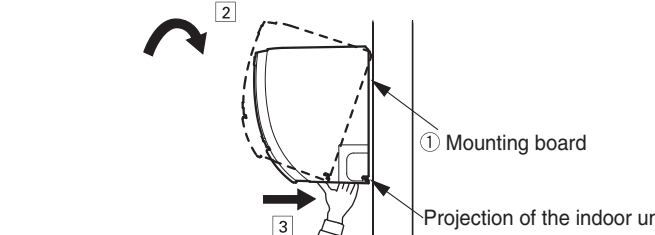


CAUTION

- Be sure that the drain hose is loosely connected bend or proper condition like left figure.

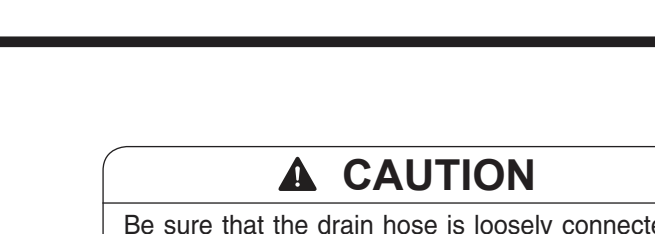


CAUTION

- Be sure that the drain hose is loosely connected bend or proper condition like left figure.

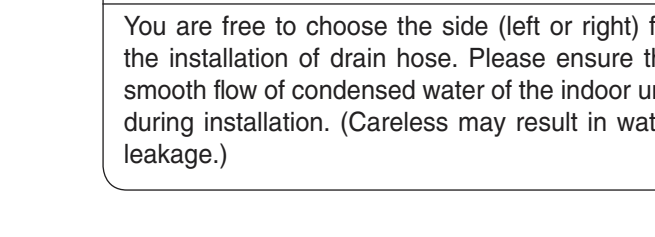


CAUTION

- Be sure that the drain hose is loosely connected bend or proper condition like left figure.

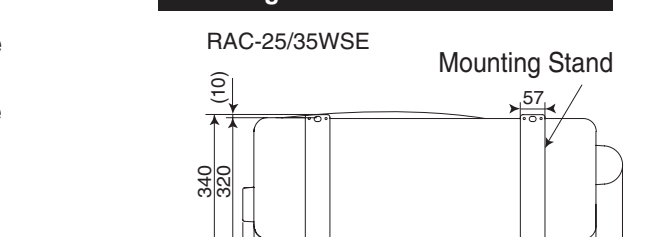


CAUTION

- Be sure that the drain hose is loosely connected bend or proper condition like left figure.

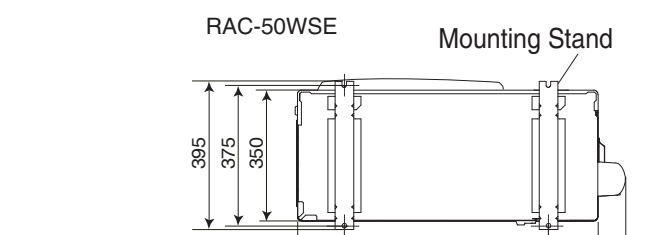


CAUTION

- Be sure that the drain hose is loosely connected bend or proper condition like left figure.

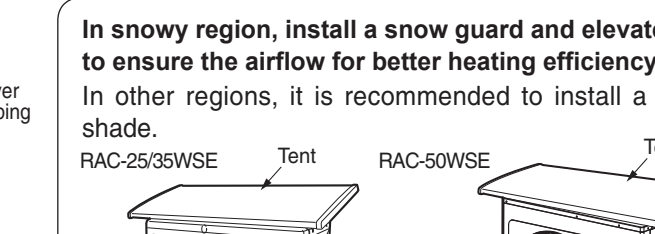

CAUTION

- Be sure that the drain hose is loosely connected bend or proper condition like left figure.

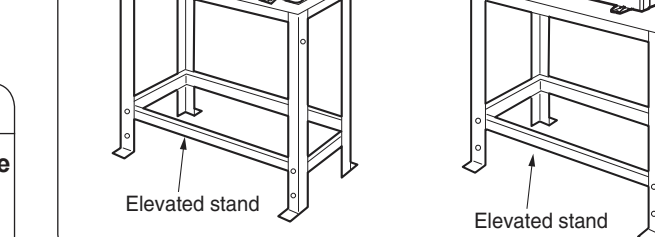


CAUTION

- Be sure that the drain hose is loosely connected bend or proper condition like left figure.

Failure to do so may cause an injury.

1. Pipe Cutting and Flaring


- Use a pipe cutter to cut the pipe and remove burr.

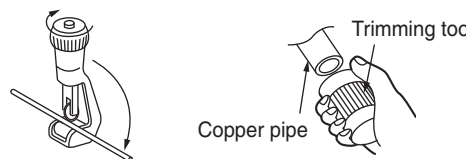

CAUTION

- Remove burr**
If burr is not removed, it may cause leakage.
- Point the side to be trimmed downwards during trimming to prevent copper chips from entering the pipe.**

- Before flaring, please put on the flare nut.

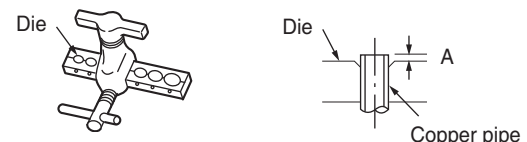

Please use exclusive tool for refrigerant R410A, R32.

Outer Diameter (Ø)	A (mm) Rigid Flaring Tool For R410A, R32 tool	For R22 tool
6.35 (1/4")	0 - 0.5	1.0
9.52 (3/8")	0 - 0.5	1.0
12.7 (1/2")	0 - 0.5	1.0


CAUTION

- When removing flare nut of the indoor unit, first remove the nut of small diameter side. Otherwise the nut of big diameter side will fly out.
- Prevent water from entering into the piping when connecting.
- Be sure to tighten the flare nut to the specified torque with a torque wrench.
- If the flare nut is overtightened, it may split after sometime and may cause refrigerant leak.
- When using a control valve, make sure that the packing is not deteriorated and avoid excessive tightening of the handle. Otherwise, gas may leak from the service valve.

3. Remove of Air from the Pipe and Gas Leakage Inspection

From the viewpoint of global environment protection, air purge type should be vacuum pump method.


- Fully tighten the "H" shuttle of the manifold valve and completely unscrew the "Lo" shuttle. Run the vacuum pump. (Adapter is switched on)
- After pumping for about 10-15 minutes, completely loosen the "Lo" shuttle and switch off the vacuum pump. (Adapter is switched off)

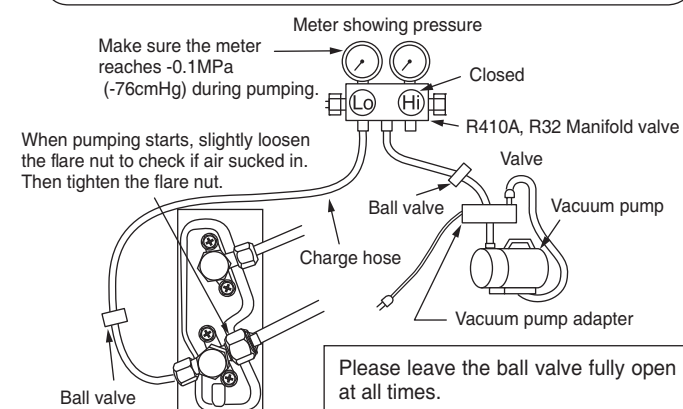

- Remove the valve head cap of the service valve.
- Remove the cap of valve core and connect the charge hose.
- Connect the vacuum pump adapter to the vacuum pump and connect the charge hose to the adapter.

- Loosen the spindle of the service valve with small diameter by 1/4 turn and tighten the spindle immediately after 5 to 6 seconds.
- Remove the charging hose from the service valve.

- Unscrew the spindle of both the service valves in anticlockwise direction to allow the flow of refrigerant (unscrew halfway).
- Tighten the cap of valve head. Check and make sure that there is no gas leakage.

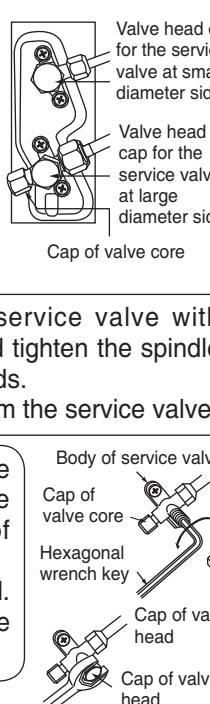


- 9 -

1. Heat Insulation and Finishing of Piping

- Cover the pipe connection with the auxiliary insulation sheet, wrap the tape without any gap.
- If there is gap or over-tightened, it may cause condensation.
- Please wrap the pipe and power cord together with vinyl tape as shown in the figure of the installation of indoor and outdoor units on page 2.
- To enhance the heat insulation and to prevent water condensation, please cover the outdoor part of the drain hose and pipe with insulation sheet.
- When using an exit cover, do not attach a bush for pipe.
- When an exit cover is not used, seal the gap of the hole on the wall, bush and pipe completely with putty. If an exit cover is used, seal the gap of the hole on the wall and pipe completely with putty. In the case of embedded piping, seal the gap of the pipe completely with putty. Incomplete sealing could cause entering of high humidity air into the wall or indoor unit, which could result in dripping of dew. It could also cause smell or odor present outdoor and inside the wall spreading into the room.

2. Affixing the Remote Controller

- Procedures to fix the holder of remote control.
- Drill holes on wall.
- Push plug into the holes.

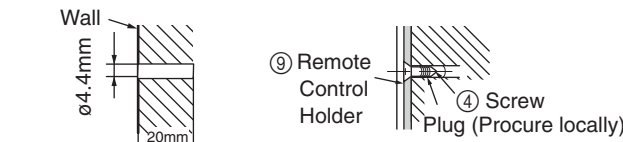


Installation Of Remote Controller

The remote controller can be placed in its holder which is fixed on wall or beam.

- To operate the remote controller at its holder, please ensure that the unit can receive signal transmitted from the controller at the place where the holder is to be when signal is received from the remote controller. The signal transmission is weakened by the fluorescent light. Therefore, during the installation of the remote control holder, please switch on the light, even during day time, to determine the mounting location of the holder.

CAUTION


- Completely seal any gap with putty**
High humidity air inside the wall or the outdoor may go in to the room and could result in dripping of dew. It could also cause smell or odor present outdoor and inside the wall spreading into the room.

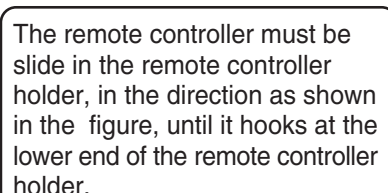

- 11 -

Gas Leakage Inspection

- Please use gas leakage detector to check if leakage occurs at connection of Flare nut as shown on the right.
- If gas leakage occurs, further tighten the connection to stop leakage.

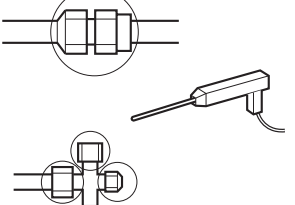


Works to be done when transferring or removing air conditioner


From the viewpoint of global environment protection, refrigerant should be recovered (pumped down) when the air conditioner is transferred or removed.

- Perform force-cooling operation (refer to "Force-cooling operation" on page 12) for about 5 minutes as a preliminary operation.
- Tighten the spindle of the service valve at small diameter side in clockwise direction.
- Continue the force-cooling operation for another 1-2 minutes, and then tighten the spindle of the service valve at large diameter side in clockwise direction.
- Stop the force-cooling operation.

Procedures of Wiring

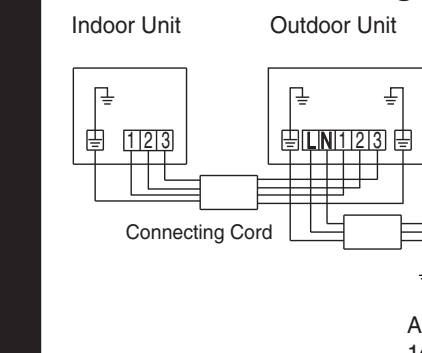

Detail of Cutting the Connecting Cord

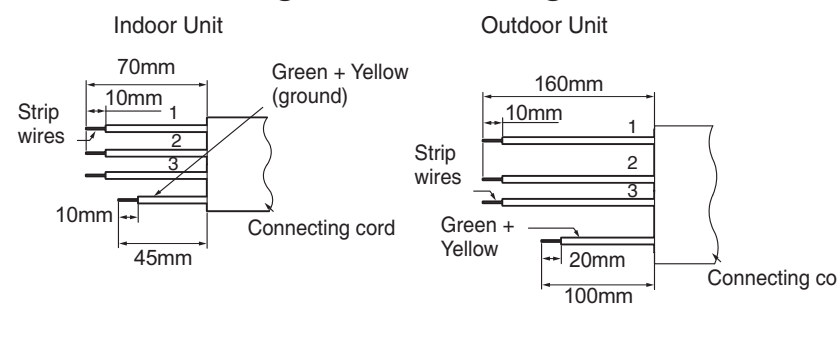


WARNING

- If the supply cord is damaged, it must be replaced by a special cord (Maker's service parts) available from the manufacturer or its service agent.
- The naked part of the wire core should be 10mm fix it to the terminal tightly. Then try to pull the individual wire to check if the contact is tight. Improper insertion may burn the terminal.
- Be sure to use only wire specified for the use of air-conditioner.
- Be sure to use only power cables approved from the authorities in your country. For example in Germany: Cable type: NYM 3x1.5mm². (Fuse = 25A time delay)
- Please refer to the manual for wire connection, the wiring technique should meet the standard of the electrical installation.
- Leave some space in the connecting cord for maintenance purpose and be sure to secure it with the cord band.
- Secure the connecting cord along the coated part of the wire using the cord band. Do not exert pressure on the wire as this may cause overheating or fire.
- There is a AC voltage of 220-230V between the L and N terminals. Therefore, before servicing, be sure to remove the plug from the AC outlet.

Wiring of the Indoor Unit

- Remove the front panel. (Refer to "Removing and Attaching the Front Panel" on page 13)
- Remove the terminal cover and screw, hold the upper part when removing.

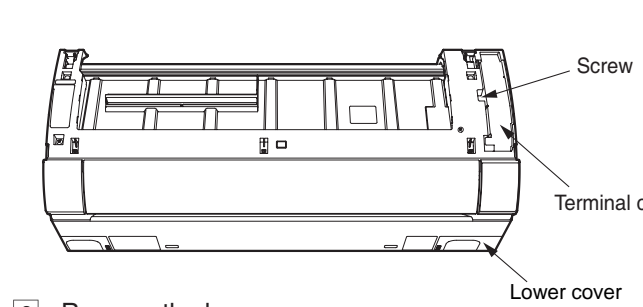

- Remove the lower cover.

- Bring the connecting cord from the rear surface to the front surface through the cable guide.
- The connecting cord should be fix with the terminal. Tightening torque reference value: 1.2-1.6N·m (12-16kgf·cm)
- Excessive tightening may damage the terminal.
- Connect the connecting cord and fix with cord band.
- Hook onto the claw at the lower part of the terminal cover and fix with screw.

- 10 -


3. Operation Test

Operation test

- Please ensure that the air conditioner is in normal operation condition during the operation test.
- Explain to your customer about the proper operation procedures as described in the operation manual.
- If the indoor unit won't operate, check the cable for correct connection.

Force-cooling operation

- When the temporary switch of the indoor unit is pressed for more than 5 seconds, the force-cooling operation starts. Use this mode when performing the failure diagnosis or collecting refrigerant into the outdoor unit.
- The Timer lamp flashes when force-cooling is in operation.
- Press the temporary switch again or use the remote controller to stop the force-cooling operation once this operation is completed.

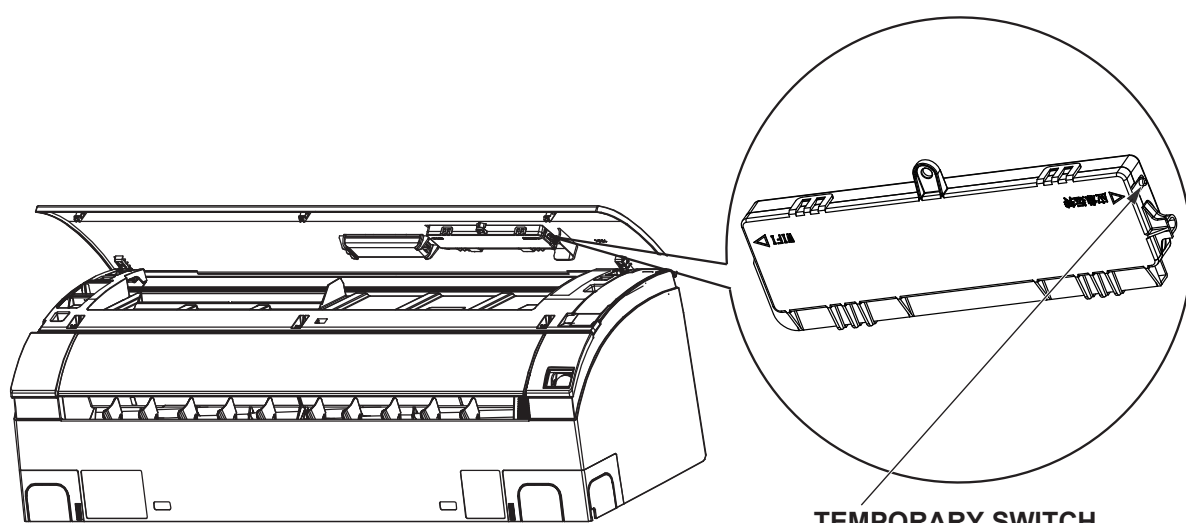

CAUTION

- Do not operate the unit for more than 5 minutes while the spindle of the service valve is closed.

- 12 -


Removing and Attaching the Front Panel

- Be sure to hold the front panel with both hands to detach and attach it.


Please refer to the operation manual on how to open and close the front panel.

Removing

- After removing 1 screw with a short screw driver (L100, TYPE-PH2x38), remove the Temperature Display box (Please remove it toward the direction as illustrated if the WIFI adapter is installed).

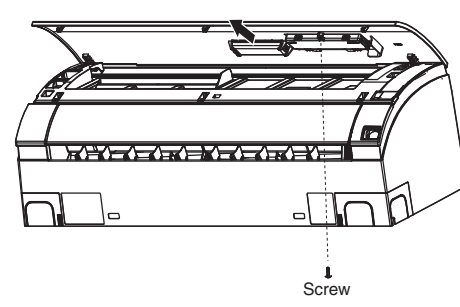


- Push the end of the right-side arm outward to release the tab.
- Move the left-side arm outward to release the left tab, and then pull the panel towards you.

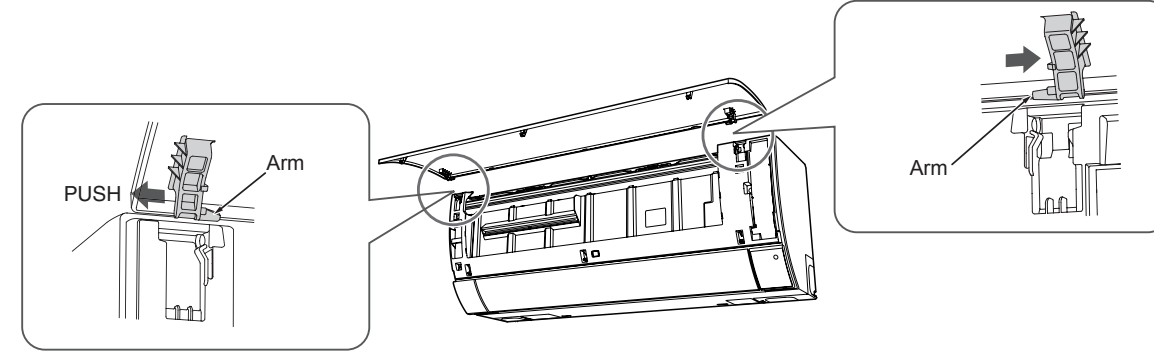

Attaching

- Insert the shaft of the left arm along the step on the unit into the hole.
- Securely insert the shaft of the right arm along the step on the unit into the hole.
- Make sure that the front panel is securely attached.
- Attach the temperature display box and WIFI adapter.

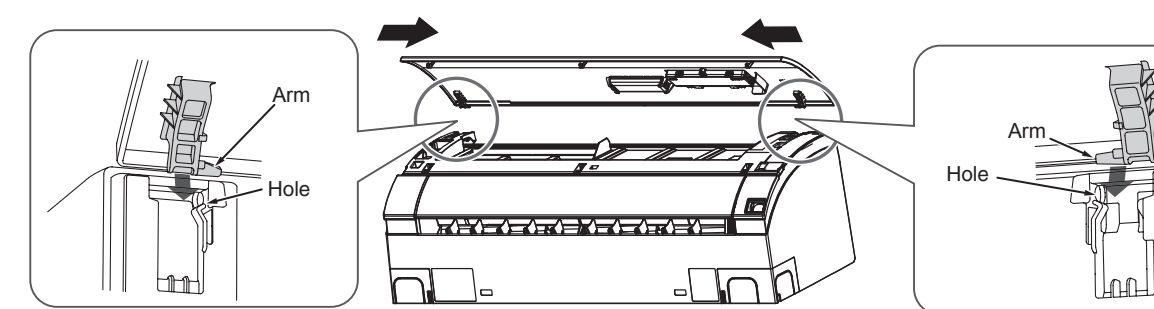

CAUTION

- When being installed or removed, the panel is likely to slide off.
- When lifting to open the panel, do not apply too much force. Otherwise, the panel may come off or malfunction may be caused.


- 13 -

CAUTION


- Before trial running of the air conditioner, be sure to check the following steps 1 and 2, and then operate it in the cooling-heating room.

1. Verifying installation of the terminal block and the front panel

Check whether the terminal block cover has been installed.

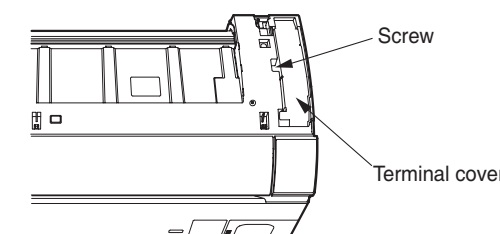


To close the front panel, press its right and left sides first and then the center until it clicks into place.

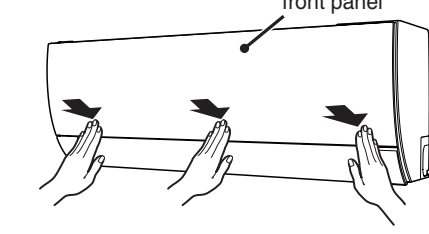

2. Verifying cleaning of the filter mesh

- Before turning on the power of the air conditioner, make sure that the filters (2 pieces at the top and 2 pieces in front) have been installed properly and locked.
- When the power of the air conditioner turns on, the "Filter Cleaning Operation" starts automatically. The CLEAN indicator is lit during the filter cleaning operation.

- Unlike the conventional type of air conditioner, this air conditioner has no grille at its top surface. It is because this air conditioner is equipped with the cleaning unit, and to prevent the top surface from getting dirty easily.
- Do not touch the cleaning unit during the filter cleaning operation. Doing so could result in injury or failure of the appliance.

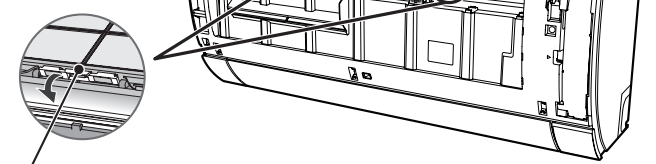


Filter Lock

- Make sure that the top filters have been locked. Lock the filters if they are not locked. (The filters may come off during the operation if they are not locked.)

Cleaning indicator

- To verify cleaning of the filter mesh, send wind when upper and lower wind boards are closed. The cleaning indicator lights up.
- After the cleaning action is acknowledged, if the cleaning diagnosis indicator blinks (4" on/1" off), it indicates abnormality in cleaning operation of the filter mesh. In this case, refer to the Operating Instructions for a solution.

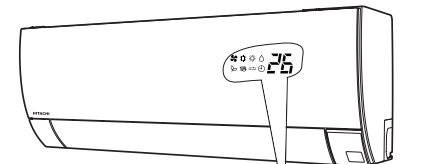

FILTER CLEAN LAMP
This lamp lights during filter cleaning operation.


FROST WASH LAMP
This lamp lights when frost wash is working.

- Filter cleaning operation check will take approximately 8 minutes for the cleaning unit to make one cycle of back and forth movement. Make sure that the cleaning unit is actually working by a visual inspection from the top of the indoor unit.
- Close the front panel properly.
- If the "ON/OFF" button on the remote control is pressed during the operation check, the operation check is stopped before its completion. Wait until the operation check is completed without pressing any button on the remote controller.
- If the filters are not installed properly, "Filter Cleaning Operation" is found abnormal and the CLEAN indicator blinks. The filters may come off during operation if they are not installed properly.
- If the CLEAN indicator blinks during the "Filter Cleaning Operation" means that the operation is stopped before its completion due to an abnormal condition. In this case, refer to "Check the Operation of the Filter Cleaning Unit" and "Troubleshooting" of the operation manual and take appropriate actions.


- 15 -

How to remove the front cover


- Remove the front panel.
- Hold the handle and Pull the dust box to the front towards the direction as illustrated.

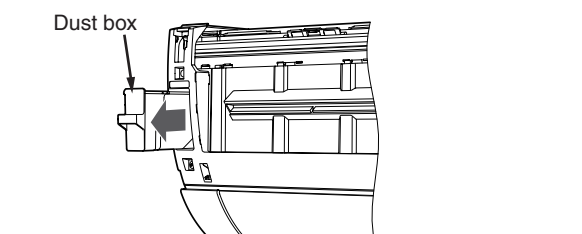


- Unscrew screw of the terminal cover, and remove it toward the direction as illustrated.

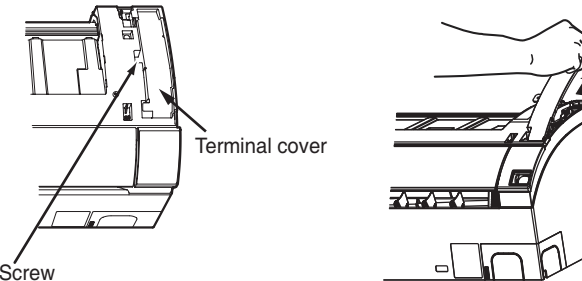

- Remove 2 screws.
- Open the Horizontal deflector to the position where the front cover is easy to remove.
- Pull the center of the front cover towards you and release the claw in the middle.
- Release the 3 claws on top of front cover and 2 claws in front, remove the front cover toward the direction as illustrated.



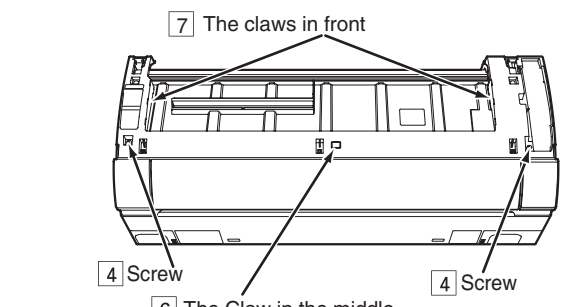


- The claw on top of the front cover (the back of the front cover)
- The claw on top of the front cover
- The claw on top of the front cover

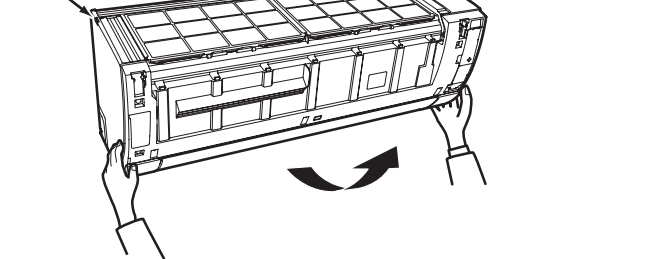

Attaching the front cover


It's the opposite order of removing the front cover. When Attaching the Front Cover, ensure that the 2 claws of the front cover is in the hole of cabinet. Also, ensure that the claws on top of the front cover have been fixed on.

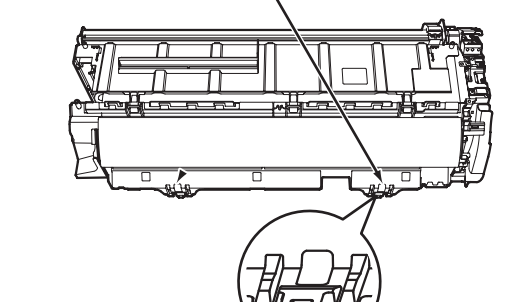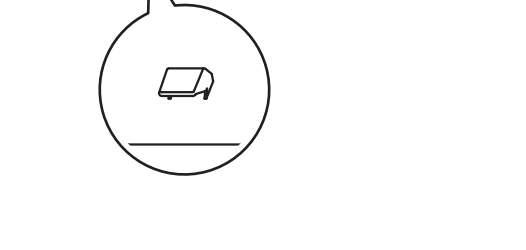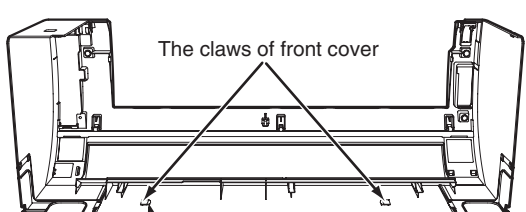

How to connect the optional parts

(WIFI Adapter, H-LINK RAC Adapter, Dry contact, Wirde Remote Controller)

- For cable connection to control P.W.B., you need to remove front cover and electrical box cover. Each connecting location is as below.
- Dry contact: CN6
- WIFI Adapter or H-LINK RAC Adapter: CN7
- Wired Remote Controller: CN20
- Please check and confirm manuals attached to each optional parts for more connection details.
- You can refer to this installation manual how to remove and re-attach the front cover.
- Please be careful not to damage lead wires by edge of plate when connecting the optional parts.

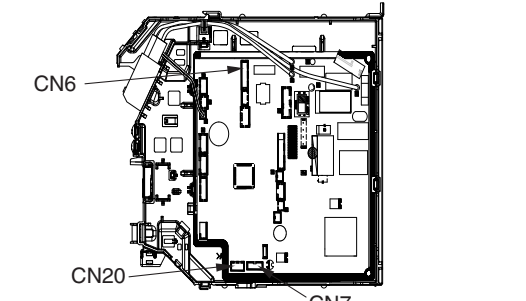


- 14 -


How to check Micro Mesh Stainless Filter installation

- Remove the front panel and check if the filter locks (2 pcs) are tripped or slant.
- If the filters are not inserted properly, refer to following "Installing the Micro Mesh Stainless Filters".
- Please perform "Filter cleaning operation check" again after reinstalled the filters.

Installing the Micro Mesh Stainless Filters

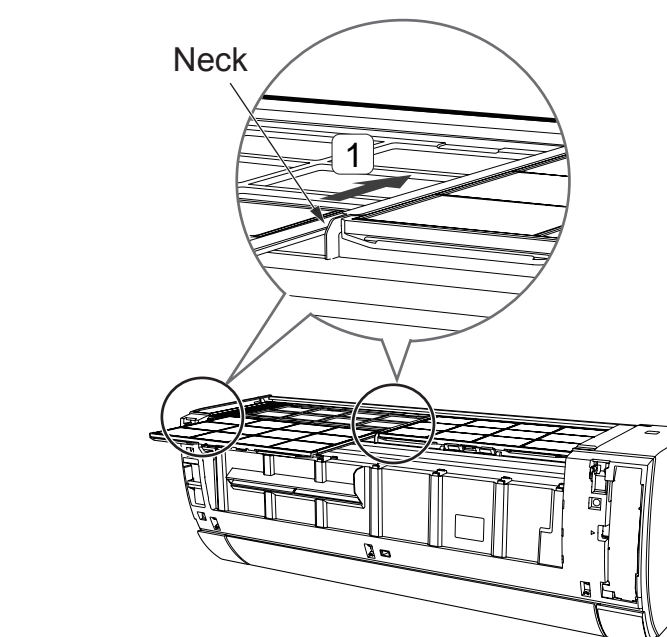

- Align the filter with the top face of the indoor unit, and then slide and push it in. (The shape of the left and right filters is the same.)

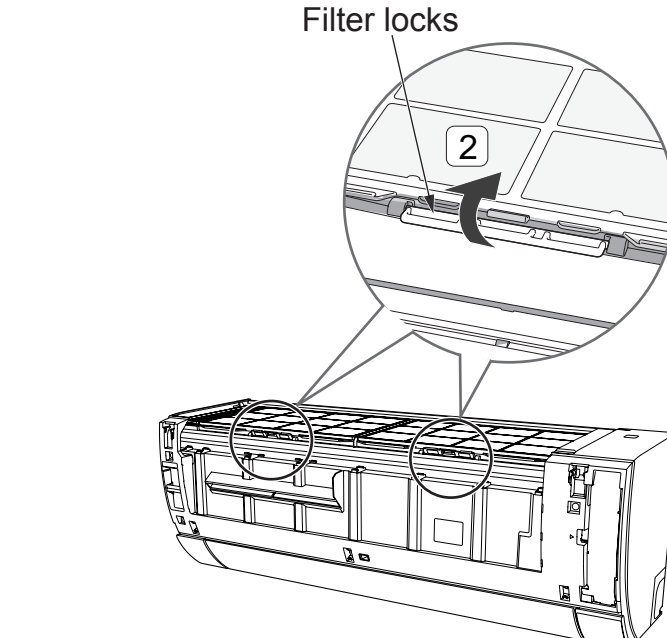

- Tighten the left and right filter locks to the indicated direction.

- 16 -